

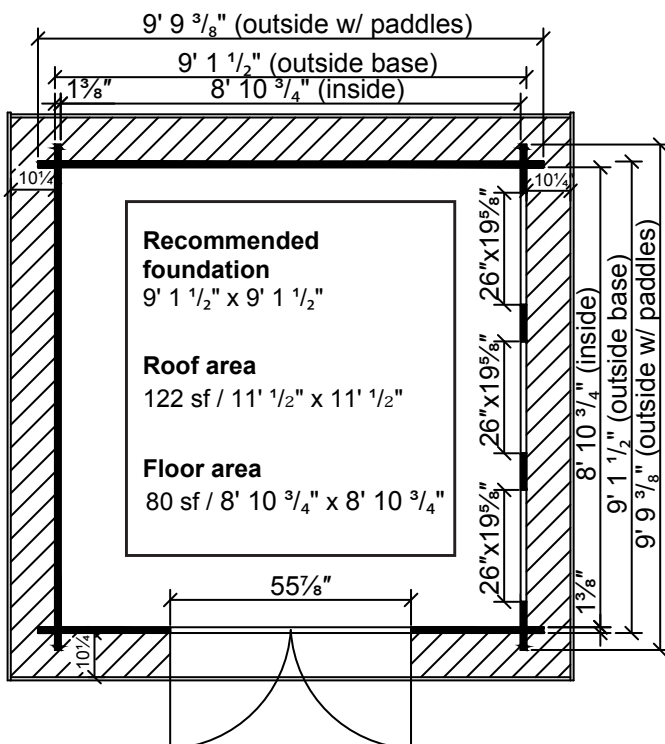
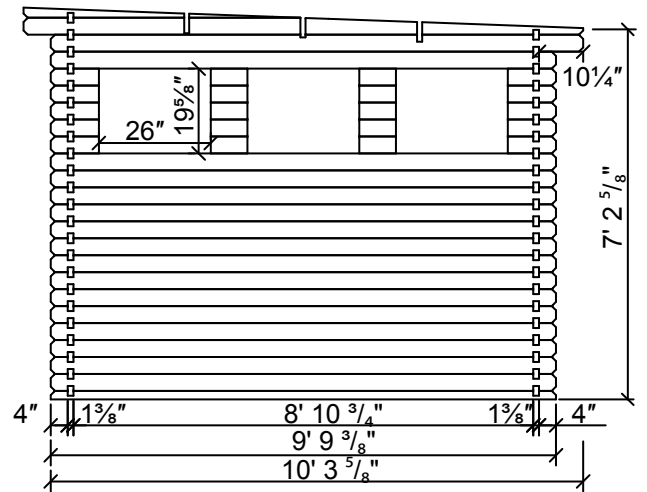
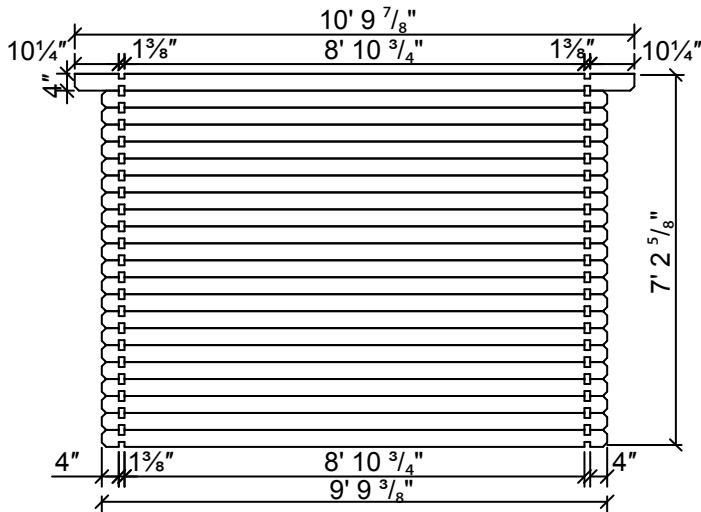


MODERNA 10 x 10

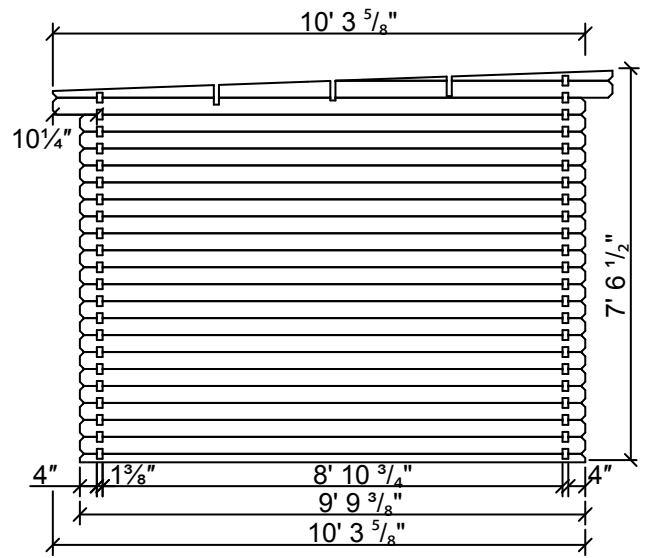

Floorjoist Placement

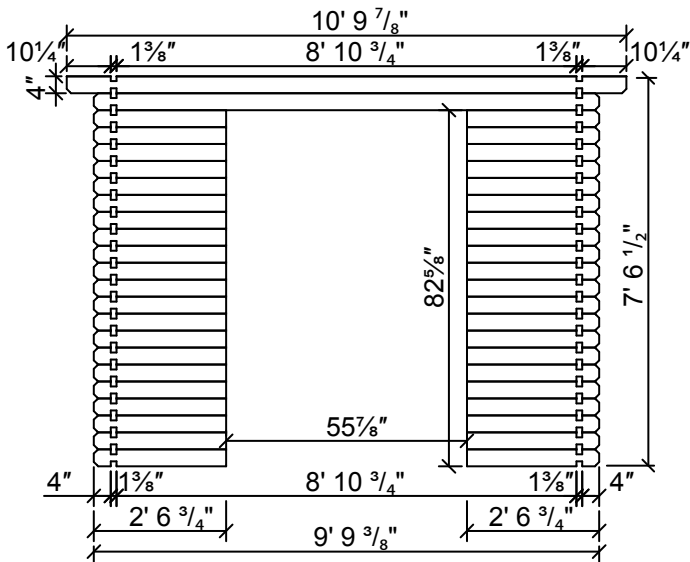